


Steel Bracket Fitting Instructions

Handcrafted Shelves

Fixings supplied with our steel bracket rustic pine floating shelves.
Available for both solid walls and plasterboard walls*.

YOU WILL NEED...

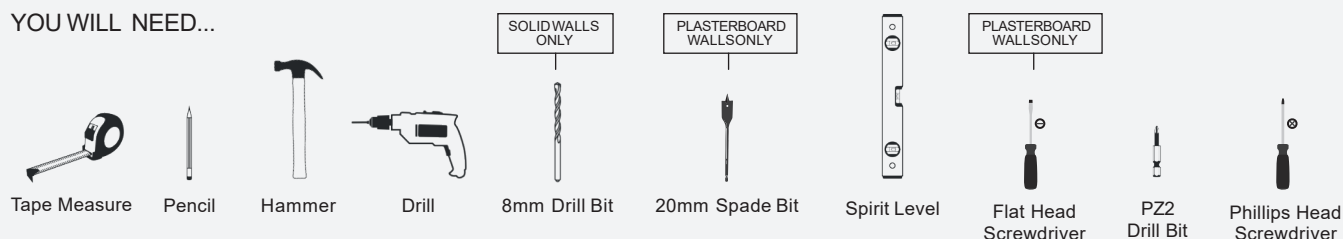


Step 1




Mark out where you would like your brackets to sit on your wall making sure the markings are level with a spirit level.

Step 2

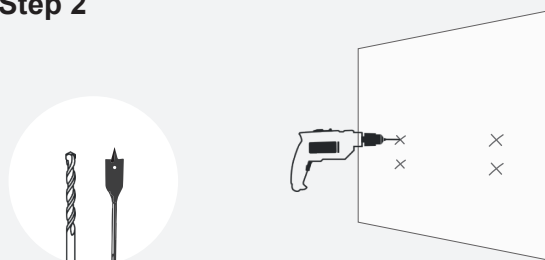

Drill the wall deep enough to accept the wall plugs or grip it fixings using an **8mm drill bit** for solid walls or a **20mm spade bit** for plasterboard walls.


Step 3 (Solid walls)

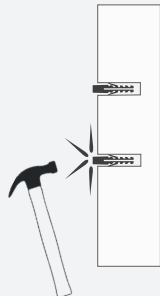

Insert the wall plugs into the 4 holes and use a hammer to tap the wall plugs flush with your wall.


Step 3 (plasterboard walls)

Slim gripping wings open in the cavity behind the plasterboard to provide a secure anchor and distribute weight more effectively.

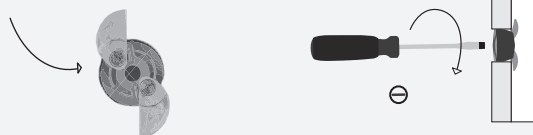

Insert a grip it fixing into each hole and tap with a hammer so its flush with your wall. Use a flat head screwdriver to turn the cam and open the wings for super grip strength.

Step 4

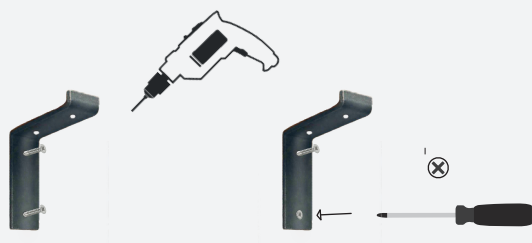

Line up the steel brackets with the wall plugs or grip it fixings and use a screwdriver or a drill with the PZ2 drill bit to screw in the appropriate fixings into position.

Step 5



Place the pine shelf on top of the brackets and screw down for extra support in to the upwards facing holes.